

# Head Removal Using Tool (P/N:194144)

Step 1: The Head removal tool (P/N: 194144) consists of three parts ( applicable to 8” Coded models only)



A. Base Plate    B. Stud Threaded(2 no's)    C. T-Socket (2 nos)

Step 2: Engage the stud in the threaded holes provided on the bearing plate.

Step 3: With the plate against the face of the vessel , engage the T-Socket with the threaded studs.

Step 4: Run the hand grip on the T-Socket's and continue to tighten (clock-wise) till the head assembly comes out.

Head removal using tool

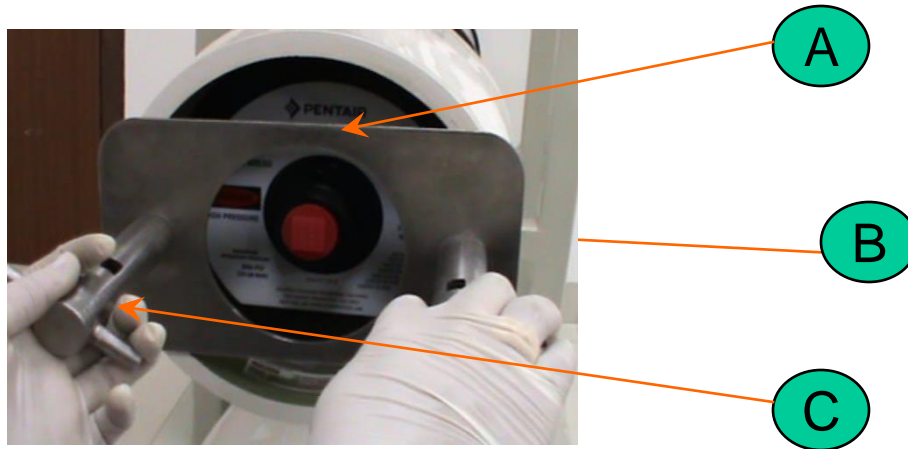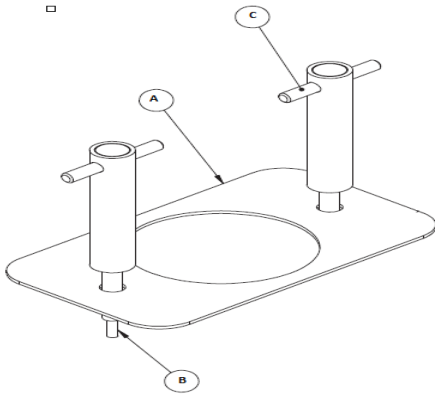

Step 4: Repeat the procedure on the opposite side of the vessel